

Warranty

Please keep this Warranty Card in a safe place

Model: **M-3 8x30 BIF.GA**

Purchase date:

Dealer:

Opticron M-3 binoculars are of a very high quality both in its performance and construction and for your peace of mind we offer a Premier Limited Lifetime Warranty.

The Premier Limited Lifetime Warranty covers all the optical and mechanical components as well as the outer protective armor, but not accessories such as neck straps, rainguards, dust caps, objective lens covers etc. which are covered by our Standard Warranty.

In the case of accidental damage or defects attributable to faulty parts or assembly we will assume responsibility for the full costs of repair up to 5 years

from the date of purchase. We reserve the right to decide whether defective parts or products should be repaired or replaced.

The Premier Limited Lifetime Warranty does not cover loss, theft or deliberate damage to the instrument.

Registration

It is important you register your new purchase to activate your Premier Limited Lifetime Warranty. To register your product and activate the warranty please visit www.opticronusa.com and complete the online Product Registration Form.

Premier Limited Lifetime Warranties are available on new instruments purchased from participating dealers in North America and are transferable. If you part with your instrument please make sure the new owner has a copy of your original proof of purchase and re-registers their ownership at www.opticronusa.com.

Privacy

Opticron takes your privacy seriously and we do not share personal information with other companies.

M-3USA0714

opticron



opticron

Address: Opticron LLC, 16501-D Northcross Drive,
Huntersville, NC 28078

Tel: (704) 895 3046

Fax: (704) 895 3047



Email: sales@opticronusa.com

M-3 8x30 BIF.GA

User Instructions and Warranty

North America

Main Features

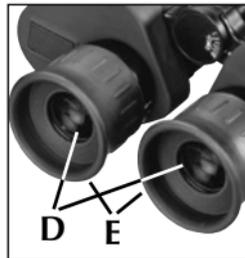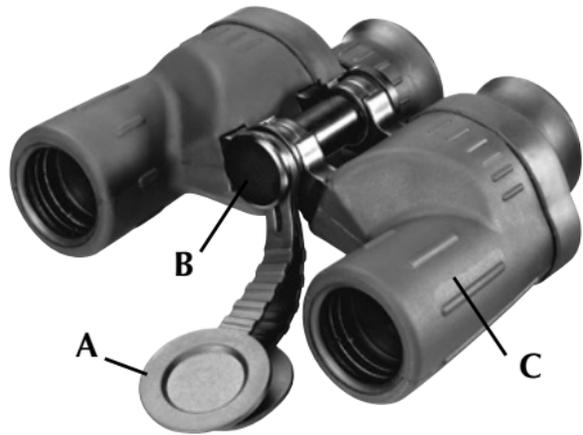

- A Integral rubber objective lens covers (supplied)
- B Integral tripod adapter socket - unscrew to fit 31004 small L mount (optional extra - visit www.opticron.co.uk for more information)
- C Lightly ribbed rubber armoring for positive handling with or without gloves
- D Long eyerelief eyepieces for comfortable viewing with or without glasses
- E Fold down rubber eyecups

Model supplied in semi rigid waterproof case neoprene lanyard, rainguard and integral objective lens covers.

WARNING. Never under any circumstances use a binocular to view the sun. Doing so will cause serious damage to your eyes.

User Instructions

To help you get the best results from your equipment, please read the following instructions carefully.

Adjusting to obtain a single picture. To adjust the binoculars to match the spacing of your eyes simply rotate the two sides of the instrument around the center hinge until a single rounded picture is obtained when looking through both eyepieces.

Adjusting for maximum sharpness (focusing). M-3 binoculars feature individual eyepiece focusing but the large depth of field means they little or no refocusing from 50 yards to infinity distance. As a rule for general observation over 50 yards, the binoculars can be 'set' with the zero marks on the eyepiece tubes positioned directly above the vertical line marks on the main body. Focusing at close range (below 50 yards) is facilitated by turning the left and right eyepieces simultaneously anticlockwise.

Adjusting for differences in visual acuity. Some people have differences in strength or visual acuity between their eyes. To compensate for this the eyepiece tubes can be rotated to different positions (usually within a few degrees of each other) for any given distance.

Wearing glasses. M-3 binoculars deliver full field of view with or without glasses. To ensure the maximum available field of view is obtained, the fold down rubber eyecups fitted to each eyepiece housing should be in the 'down' position when viewing with glasses. Be sure to return the eyecups to the 'up' position if you or anybody else wants to view without glasses.

Care and cleaning. M-3 binoculars require little maintenance but occasionally the outside surfaces of the eyepieces and objective lenses will need cleaning. To avoid damaging these surfaces please read the following carefully.

- (i) Gently remove excess dirt and dust using a compressed air device or blower brush. Caution: Hard and persistent rubbing of dirty surfaces can cause abrasive scratches on the surface of the glass which may distort viewing.
- (ii) Breathe on exposed glass surface and then wipe with an optical cleaning cloth (code 30277) in a circular motion until the surface is clean again.

Do not attempt to dismantle the instrument as this will invalidate the guarantee.

We hope you will get a great deal of pleasure from your new Opticron binocular. If you have any problems or damage the instrument in any way our Service Department is on hand to help you.